7VM333M-RZ

AMD Athlon™/Athlon™ XP/Duron™ Socket A Processor Motherboard

User's Manual

Rev. 1002

12ME-VM333MRZ-1002

Copyright

© 2004 GIGABYTE TECHNOLOGY CO., LTD

Copyright by **GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT").** No part of this manual may be reproduced or transmitted in any from without the expressed, written permission of **GBT**.

Trademarks

Third-party brands and names are the property of their respective owners.

Notice

Please do not remove any labels on motherboard, this may void the warranty of this motherboard.

Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.

Declaration of Conformity

We, Manufacturer/Importer
(full address)

G.B.T. Technology Trading GMbH
Ausschlager Weg 41, 1F 20537 Hamburg, Germany

declare that the product
(description of the apparatus, system, installation to which it refers)

is in conformity with
(reference to the specification under which conformity is declared)
in accordance with 89/336 EEC EMC Directive

Mother Board
7VM333M-RZ

☐ EN 55011	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM) high frequency equipment	☒ EN 61000-3-2	Disturbances in supply systems caused by household appliances and similar electrical equipment "Harmonic current emissions"
		☒ EN 61000-3-3	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"
☐ EN 55013	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	☒ EN 55024	Information Technology equipment-Immunity characteristics-Limits and methods of measurement
☐ EN 55014-1	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances, portable tools and similar electrical apparatus	☐ EN 50082-1	Generic immunity standard Part 1: Residual, commercial and light industry
		☐ EN 50082-2	Generic immunity standard Part 2: Industrial environment
☐ EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaires	☐ EN 55014-2	Immunity requirements for household appliances tools and similar apparatus
☐ EN 55020	Immunity from radio interference of broadcast receivers and associated equipment	☐ EN 60091-2	EMC requirements for uninterruptible power systems (UPS)
☒ EN 55022	Limits and methods of measurement of radio disturbance characteristics of information technology equipment		
☐ DIN VDE 0855 ☐ part 10 ☐ part 12	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals		

☒ CE marking — CE (EC conformity marking)

The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 73/23 EEC

☐ EN 60065	Safety requirements for mains operated electronic and related apparatus for household and similar general use	☐ EN 60950	Safety of information technology equipment including electrical business equipment
☐ EN 60335	Safety of household and similar electrical appliances	☐ EN 60091-1	General and Safety requirements for uninterruptible power systems (UPS)

Manufacturer/Importer

(Stamp) Date: Mar. 17, 2004 Signature: Timmy Huang Name: Timmy Huang

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)

Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street
City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard

Model Number: 7VM333M-RZ

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109 (a),Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any interference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Mar. 17 ,2004

Preparing Your Computer

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

Installing the motherboard to the chassis

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

English

Table of Contents

Chapter 1 Introduction 5
- Features Summary 5
- 7VM333M-RZ Motherboard Layout 6
- Block Diagram 7
- Hardware Installation Process 8
- Step 1: Set System Jumper (JP1) 8
- Step 2: Install the Central Processing Unit (CPU) 9
  - Step 2-1: CPU Installation 9
  - Step 2-2: CPU Cooling Fan Installation 9
- Step 3: Install Memory Modules 10
- Step 4: Install AGP Card 11
- Step 5: Install I/O Peripherals Cabels 11
  - Step 5-1: I/O Back Panel Introduction 11
  - Step 5-2: Connectors Introduction 12

Chapter 2 BIOS Setup 19
- The Main Menu (For example: BIOS Ver. : FAa) 19
- Standard CMOS Features 21
- Advanced BIOS Features 23
- Integrated Peripherals 24
- Power Management Setup 26
- PnP/PCI Configurations 27
- PC Health Status 28
- Frequency/Voltage Control 29
- Load Fail-Safe Defaults 30
- Load Optimized Defaults 30
- Set Supervisor/User Password 31
- Save & Exit Setup 32
- Exit Without Saving 32

Chapter 3 Driver Installation 33

Chapter 1 Introduction

Features Summary

CPU	• Socket A for AMD Athlon™ XP / Athlon™ / Duron™ processor • 200/266/333MHz FSB • Supports 1.4GHz and faster
Chipset	• Northbridge : VIA KM266 Pro • Southbridge : VIA 8235
Memory	• 2 184-pin DDR DIMM sockets, supports up to 2GB DRAM (Max) • Supports DDR333/DDR266/DDR200 DIMM • Supports only 2.5V DDR DIMM
Slots	• 1 AGP slot supports 4X(1.5V) mode • 3 PCI slots
On-Board IDE	• 2 IDE controller provide IDE HDD/CD-ROM(IDE1, IDE2) with PIO, Bus Master (Ultra DMA33/ATA66/ATA100/ATA133) operation modes • Can connect up to 4 IDE devices
On-Board Floppy	• 1 Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M and 2.88M bytes
On-Board Peripherals	• 1 Parallel port • 1 Serial port (COMA), 1 VGA port, COMB on-board • 6 USB 2.0/1.1 ports (2 x Rear, 4 x Front by cable) • 1 Front Audio connector • 1 PS/2 Keyboard • 1 PS/2 Mouse
On-Board VGA	• Built-in VIA KM266 Pro
On-Board LAN	• Builit-in VIA VT6103 chipset • 1 RJ45 port
On-Board Sound	• VIA VT1617 • Supports 2/4/6-channel • Line Out / Line In / Mic In • SPDIF Out • CD In / Game connector
BIOS	• Licensed AWARD BIOS • Supports Q-Flash™
I/O Control	• ITE8705
Hardware Monitor	• CPU/System fan revolution detect • CPU/System temperature detect • System voltage detect • CPU/System fan fail warning
Additional Features	• Supports @BIOS™ • Supports EasyTune ™
Overclocking	• Over clock (CPU/DDR) by BIOS • Over voltage (DDR/AGP) br BIOS
Form Factor	• Micro ATX size form factor, 24.4cm x 22.3cm

English

7VM333M-RZ Motherboard Layout

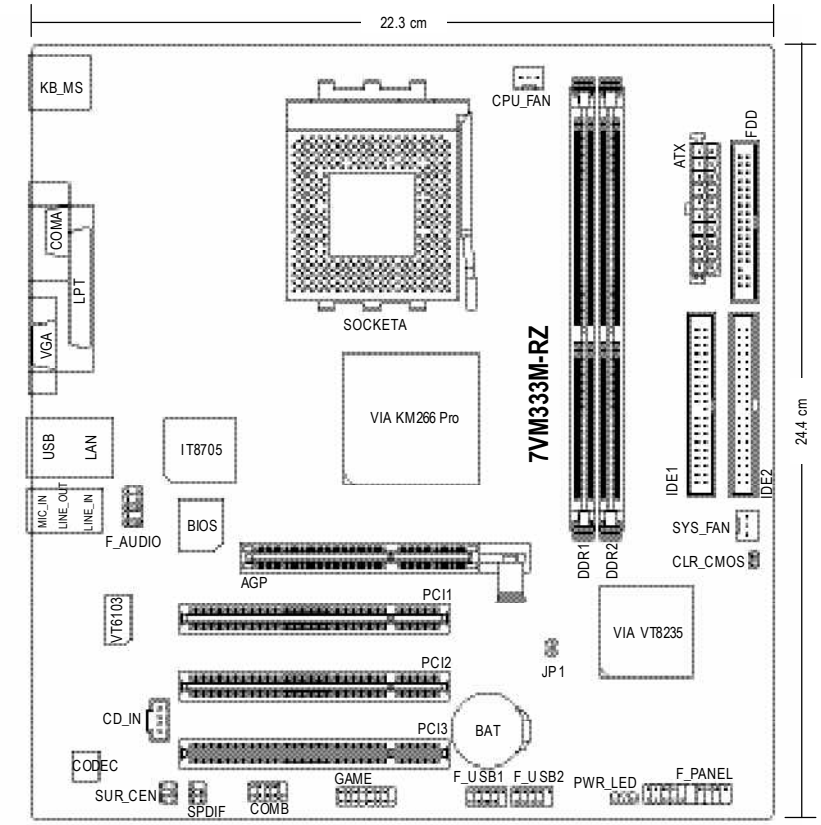

Block Diagram

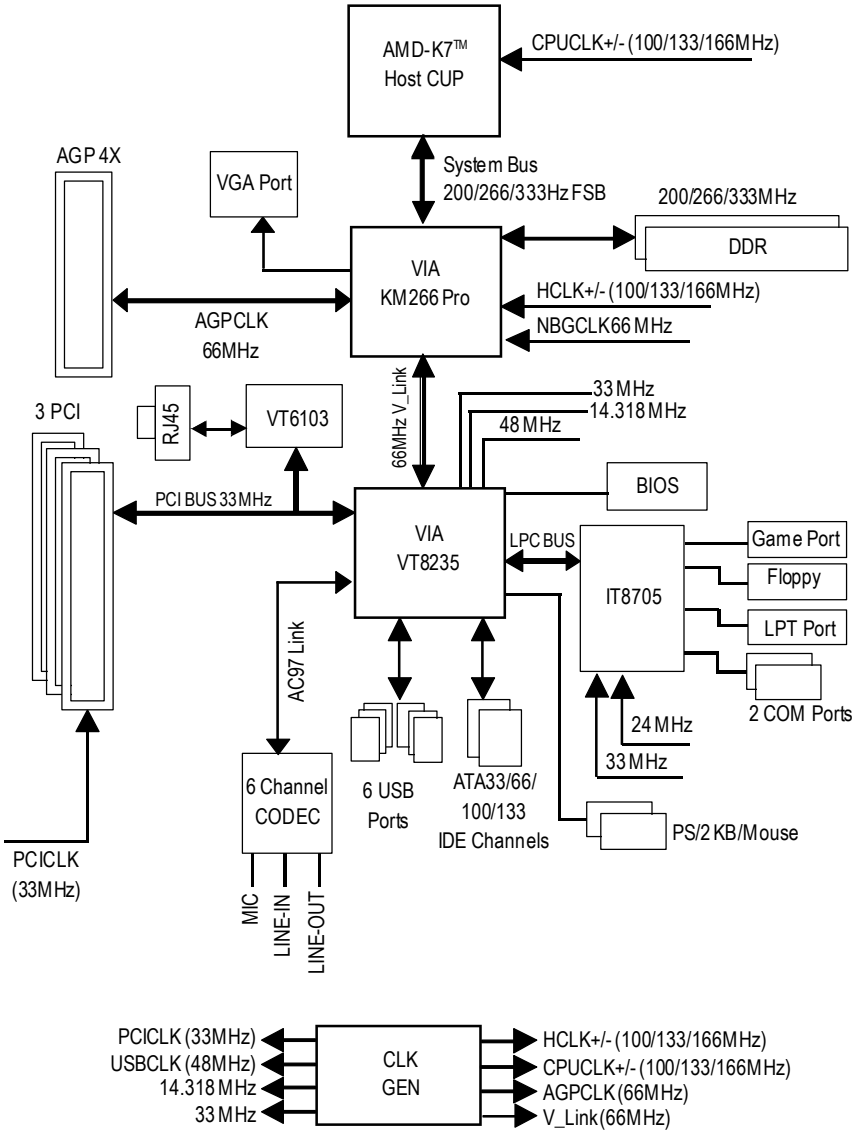

English

Hardware Installation Process

To set up your computer, you must complete the following steps:

Step 1- Set System Jumper (JP1)
Step 2- Install the Central Processing Unit (CPU)
Step 3- Install Memory Modules
Step 4- Install Expansion Cards
Step 5- Install I/O Peripherals Cables

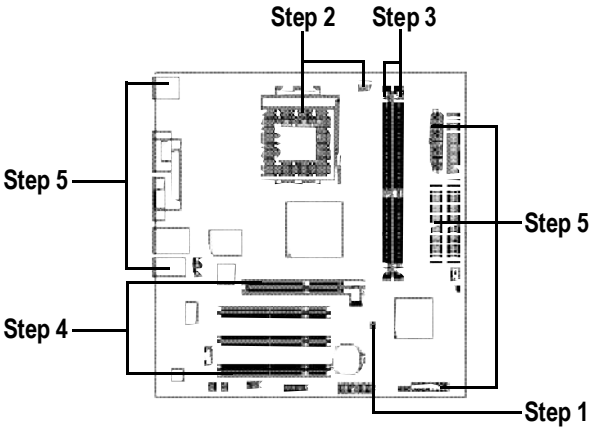

Step 1: Set System Jumper (JP1)

The system bus frequency can be switched at 100/133/166MHz by adjusting system jumper (JP1). (The internal frequency depend on CPU.)

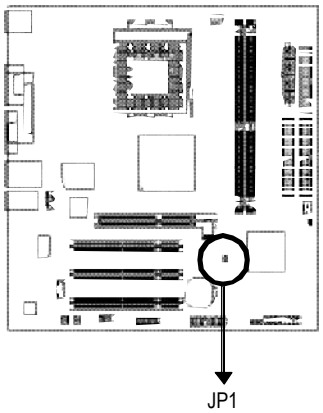

Short: 100MHz (Default)

Open: 133/166MHz

100MHz : Fix FSB 200MHz CPU
133/166MHz : Supports FSB 266/333MHz CPU

You must set JP1 to 133MHz/166MHz when you used FSB 266MHz / 333MHz CPU.

Step 2: Install the Central Processing Unit (CPU)

CAUTION

Before installing the processor, adhere to the following warning:

1. Please make sure the CPU type is supported by the motherboard.
2. The processor will overheat without the heatsink and/or fan, resulting in permanent irreparable damage.
3. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.
4. Apply thermal grease between the processor and cooling fan.
5. Never run the processor without the heatsink properly and firmly attached. Permanent damage will result.
6. Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Memory, Cards...etc.

Step 2-1: CPU Installation

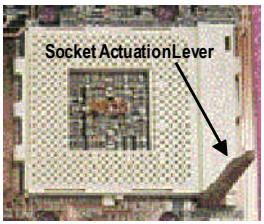

Figure 1.
Pull the rod to the 90-degree directly.

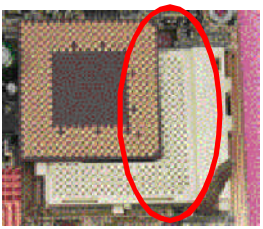

Figure 2.
Locate Pin 1 in the socket and look for a cut edge on the CPU upper corner. Insert the CPU into the socket. (Do not force the CPU into the socket.) Then move the socket lever to the locked position while holding pressure on the center of the CPU.

Step 2-2: CPU Cooling Fan Installation

Figure 1.
Apply the thermal tape(or grease) to provide better heat conduction between your CPU and cooling fan.

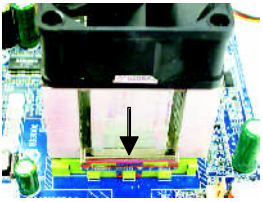

Figure 2.
Fasten the cooling fan supporting-base onto the CPU socket on the motherboard.

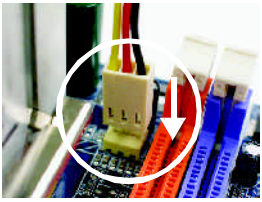

Figure 3.
Make sure the CPU fan is plugged to the CPU fan connector, than the install completely.

English

Step 3: Install Memory Modules

CAUTION

Before installing the memory modules, adhere to the following warning:

1. Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 2 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

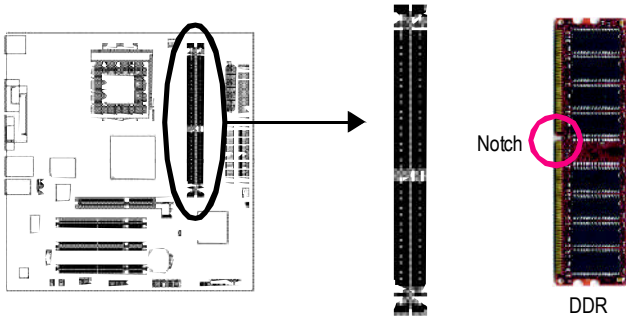

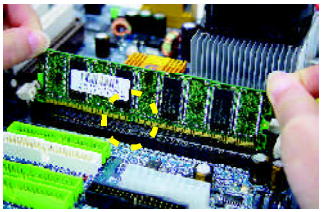

1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.

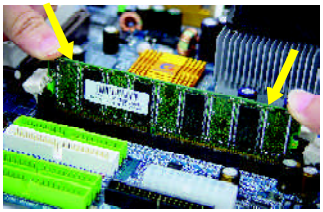

2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.

3. Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.
   Reverse the installation steps when you wish to remove the DIMM module.

Step 4: Install AGP Card

1. Read the relate AGP card's instruction document before install the AGP card into the computer.
2. If your AGP card has "AGP 4X(1.5V) notch"(show below), please make sure your AGP card is AGP 4X(1.5V).

3. Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install/ uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot. Make sure your AGP card is locked by the small white-drawable bar.

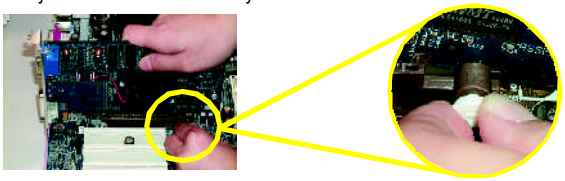

Step 5: Install I/O Peripherals Cables

Step 5-1: I/O Back Panel Introduction

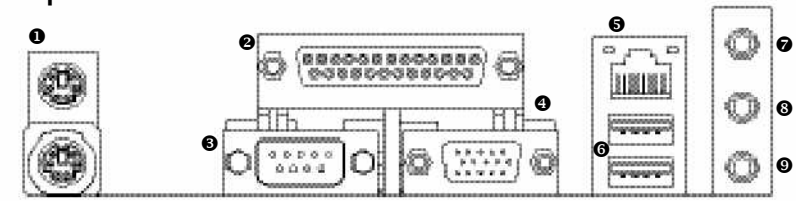

❶ **PS/2 Keyboard and PS/2 Mouse connector**
This connector supports standard PS/2 keyboard and PS/2 mouse.

❷ **Parallel port (LPT)**
Device like printer can be connected to Parallel port.

❸ **Serial port (COMA)**
Mouse and modem etc. can be connected to Serial port.

❹ **VGA port**
Monitor can be connected to VGA port.

❺ **LAN port**
LAN is fast Ethernet with 10/100Mbps speed.

❻ **USB port**
Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

❼ **Line In jack**
Devices like CD-ROM, walkman etc. can be connected to Line In jack.

❽ **Line Out jack**
Connect the stereo speakers or earphone to this connector.

❾ **MIC In jack**
Microphone can be connect to MIC In jack.
After installation of the audio driver, you are able to use 2/4/6-channel audio feature by software selection. You can connect "Front speaker" to "Line Out" jack, Connect "Rear speaker" to "Line In" jack and connect "Center/Subwoofer" to "MIC In" jack.

Step 5-2: Connectors Introduction

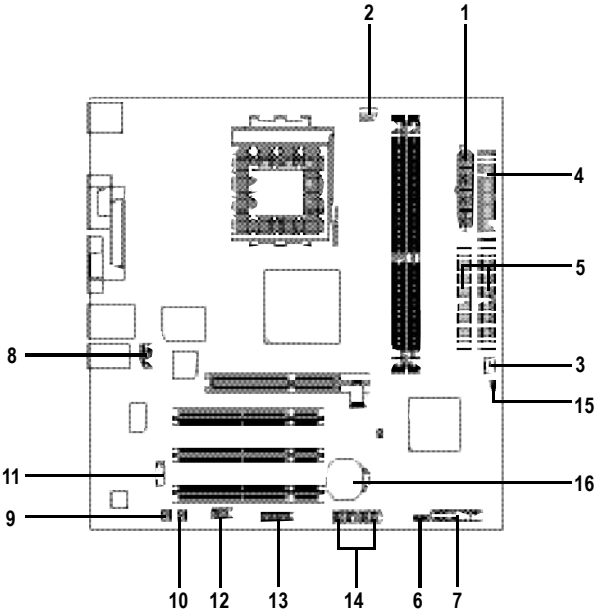

1) ATX	9) SUR_CEN
2) CPU_FAN	10) SPDIF
3) SYS_FAN	11) CD_IN
4) FDD	12) COMB
5) IDE1 / IDE2	13) GAME
6) PWR_LED	14) F_USB1 / F_USB2
7) F_PANEL	15) CLR_CMOS
8) F_AUDIO	16) BAT

1) ATX (ATX Power)

AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

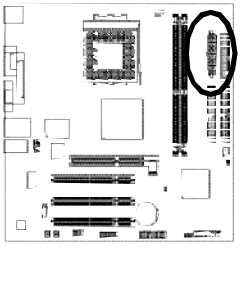

Pin No.	Definition	Pin No.	Definition
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	VCC	14	PS_ON(soft on/off)
5	GND	15	GND
6	VCC	16	GND
7	GND	17	GND
8	Power Good	18	-5V
9	5V SB (stand by +5V)	19	VCC
10	+12V	20	VCC

2) CPU_FAN (CPU Fan Connector)

Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.

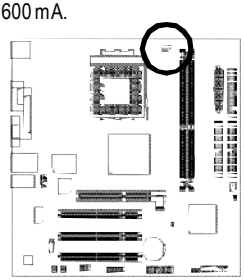

Pin No.	Definition
1	GND
2	+12V
3	Sense

3) SYS_FAN (System Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

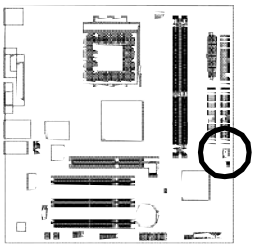

Pin No.	Definition
1	GND
2	+12V
3	Sense

English

4) FDD(Floppy Connector)

Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

The red stripe of the ribbon cable must be the same side with the Pin1.

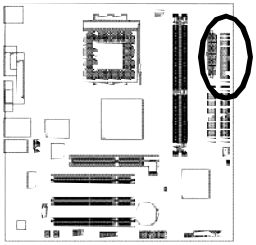



5) IDE1 / IDE2 (IDE1 / IDE2 Connector)

Please connect first hard disk to IDE1 and connect CD-ROM to IDE2.

The red stripe of the ribbon cable must be the same side with the Pin1.

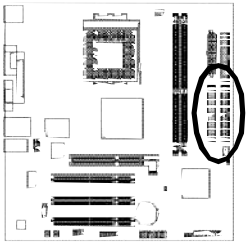

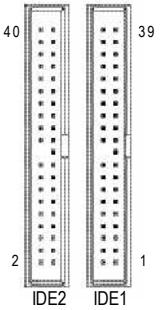

6) PWR_LED

PWR_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

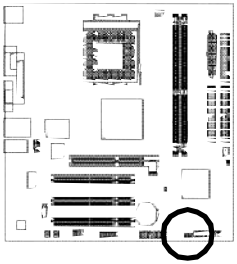

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

7) F_PANEL (2 x 10 pins Connector)

Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignment below.

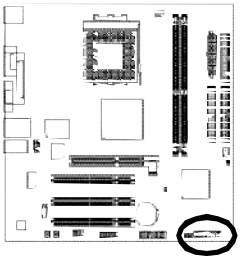

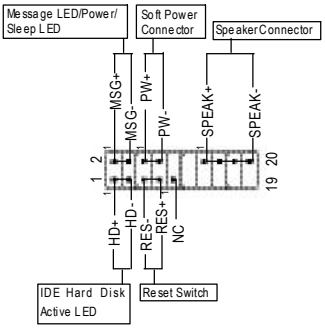

HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPK(Speaker Connector)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
RES (Reset Switch)	Open: Normal Operation Close: Reset Hardware System
PW (Soft Power Connector)	Open: Normal Operation Close: Power On/Off
MSG (Message LED/ Power/ Sleep LED)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC	NC

8) F_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.

In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assigment on the cable is the same as the pin assigment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

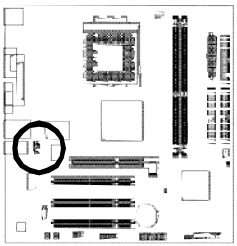



Pin No.	Definition
1	MIC
2	GND
3	REF
4	Power
5	Front Audio (R)
6	Rear Audio (R)
7	Reserved
8	No Pin
9	Front Audio (L)
10	Rear Audio (L)

9) SUR_CEN (Surround Center Connector)

Please contact your nearest dealer for optional SUR_CEN cable.

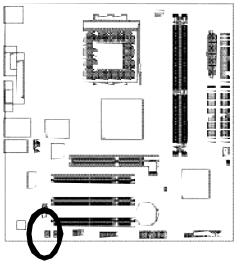

Pin No.	Definition
1	SUROUTL
2	SUROUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

10) SPDIF (SPDIF Out Connector)

The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIF connector. Check the pin assignment carefully while you connect the SPDIF cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF cable, please contact your local dealer.

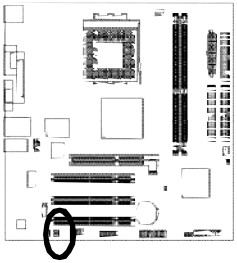

Pin No.	Definition
1	VCC
2	No Pin
3	SPDIF
4	NC
5	GND
6	GND

11) CD_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

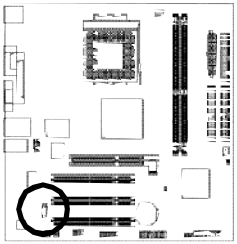

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

12) COMB (COM B Connector)

Be careful with the polarity of the COMB connector. Check the pin assignment carefully while you connect the COMB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional COMB cable, please contact your local dealer.

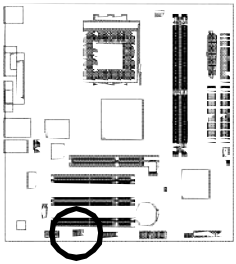

Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDTRB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

13) GAME (Game Connector)

This connector supports joystick, MIDI keyboard and other relate audio devices. Check the pin assignment while you connect the game cables. Please contact your nearest dealer for optional game cables.

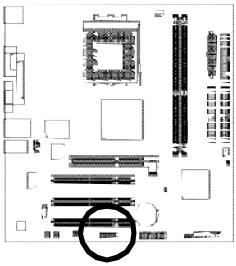

Pin No.	Definition	Pin No.	Definition
1	VCC	9	GPSA1
2	GRX1_R	10	GND
3	GND	11	GRY1_R
4	GPSA2	12	VCC
5	VCC	13	GPSB1
6	GRX2_R	14	MSO_R
7	GRY2_R	15	GPSB2
8	MSI_R	16	No Pin

14) F_USB1 / F_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

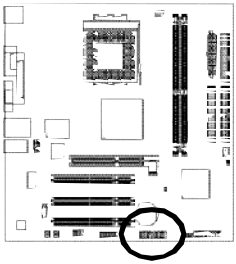

Pin No.	Definition
1	Power
2	Power
3	USB Dx-
4	USB Dy-
5	USB Dx+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

English

15) CLR_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily shor 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

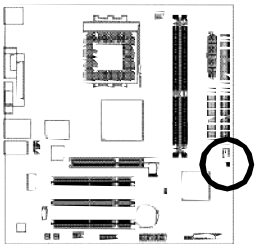

1-2 close: Clear CMOS

Open: Normal

16) BAT (Battery)

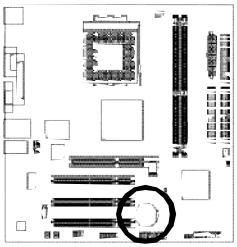

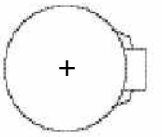

CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery, wait for 30 second.
3. Re-install the battery.
4. Plug the power cord and turn ON the computer.

Chapter 2 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Powering ON the computer and pressing <Del> immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

CONTROL KEYS

<↑><↓><← ><→>	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the file-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F8>	Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

The Main Menu (For example: BIOS Ver. : F1)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

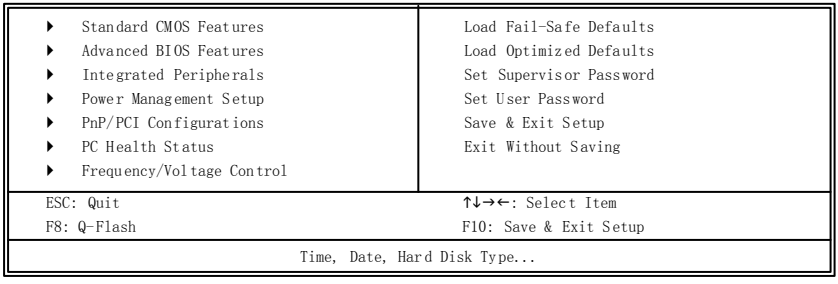

If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

- **Standard CMOS Features**
  This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**
  This setup page includes all the items of Award special enhanced features.
- **Integrated Peripherals**
  This setup page includes all onboard peripherals.
- **Power Management Setup**
  This setup page includes all the items of Green function features.
- **PnP/PCI Configuration**
  This setup page includes all the configurations of PCI & PnP ISA resources.
- **PC Health Status**
  This setup page is the System auto detect Temperature, voltage, fan, speed.
- **Frequency/Voltage Control**
  This setup page is control CPU clock and frequency ratio.
- **Load Fail-Safe Defaults**
  Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.
- **Load Optimized Defaults**
  Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.
- **Set Supervisor Password**
  Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.
- **Set User Password**
  Change, set, or disable password. It allows you to limit access to the system.
- **Save & Exit Setup**
  Save CMOS value settings to CMOS and exit setup.
- **Exit Without Saving**
  Abandon all CMOS value changes and exit setup.

Standard CMOS Features

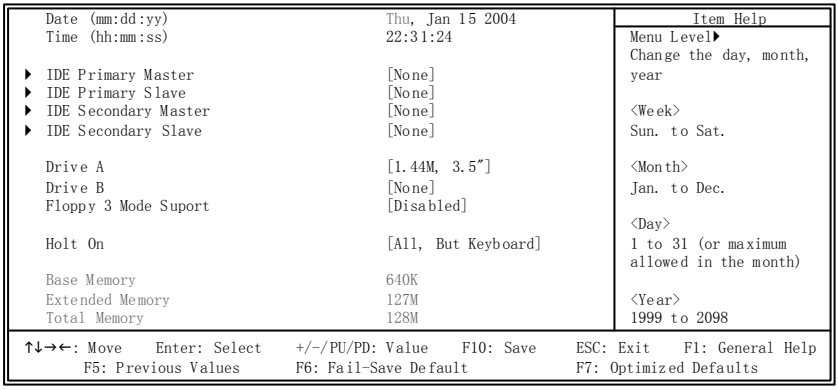
CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
Standard CMOS Features
Date (mm:dd:yy) Thu, Jan 15 2004
Time (hh:mm:ss) 22:31:24
IDE Primary Master [None]
IDE Primary Slave [None]
IDE Secondary Master [None]
IDE Secondary Slave [None]
Drive A [1.44M, 3.5"]
Drive B [None]
Floppy 3 Mode Suport [Disabled]
Holt On [All, But Keyboard]
Base Memory 640K
Extended Memory 127M
Total Memory 128M
Item Help
Menu Level▶
Change the day, month, year
<Week>
Sun. to Sat.
<Month>
Jan. to Dec.
<Day>
1 to 31 (or maximum allowed in the month)
<Year>
1999 to 2098
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

Date

The date format is <week>, <month>, <day>, <year>.

- Week The week, from Sun to Sat, determined by the BIOS and is display only
- Month The month, Jan. Through Dec.
- Day The day, from 1 to 31 (or the maximum allowed in the month)
- Year The year, from 1999 through 2098

Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

IDE Primary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

- Cylinder Number of cylinders
- Head Number of heads
- Precomp Write precomp
- Landing Zone Landing zone
- Sector Number of sectors

If a hard disk has not been installed, select NONE and press <Enter>.

Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- None — No floppy drive installed
- 360K, 5.25" — 5.25 inch PC-type standard drive; 360K byte capacity.
- 1.2M, 5.25" — 5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
- 720K, 3.5" — 3.5 inch double-sided drive; 720K byte capacity
- 1.44M, 3.5" — 3.5 inch double-sided drive; 1.44M byte capacity.
- 2.88M, 3.5" — 3.5 inch double-sided drive; 2.88M byte capacity.

Floppy 3 Mode Support (for Japan Area)

- Disabled — Normal Floppy Drive. (Default value)
- Drive A — Drive A is 3 mode Floppy Drive.
- Drive B — Drive B is 3 mode Floppy Drive.
- Both — Drive A & B are 3 mode Floppy Drives.

Halt on

The category determines whether the computer will stop if an error is detected during power up.

- No Errors — The system boot will not stop for any error that may be detected and you will be prompted.
- All Errors — Whenever the BIOS detects a non-fatal error the system will be stopped.
- All, But Keyboard — The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- All, But Diskette — The system boot will not stop for a disk error; it will stop for all other errors.
- All, But Disk/Key — The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

Advanced BIOS Features

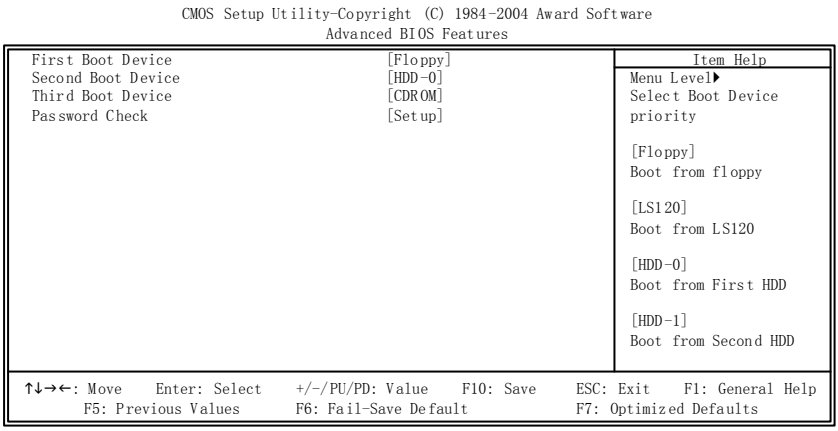

- **First / Second / Third Boot Device**
  - Floppy — Select your boot device priority by Floppy.
  - LS120 — Select your boot device priority by LS120.
  - HDD-0~3 — Select your boot device priority by HDD-0~3.
  - SCSI — Select your boot device priority by SCSI.
  - CDROM — Select your boot device priority by CDROM.
  - ZIP — Select your boot device priority by ZIP.
  - USB-FDD — Select your boot device priority by USB-FDD.
  - USB-ZIP — Select your boot device priority by USB-ZIP.
  - USB-CDROM — Select your boot device priority by USB-CDROM.
  - USB-HDD — Select your boot device priority by USB-HDD.
  - LAN — Select your boot device priority by LAN.
  - Disabled — Select your boot device priority by Disabled.

- **Password Check**
  - System — The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
  - Setup — The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

Integrated Peripherals

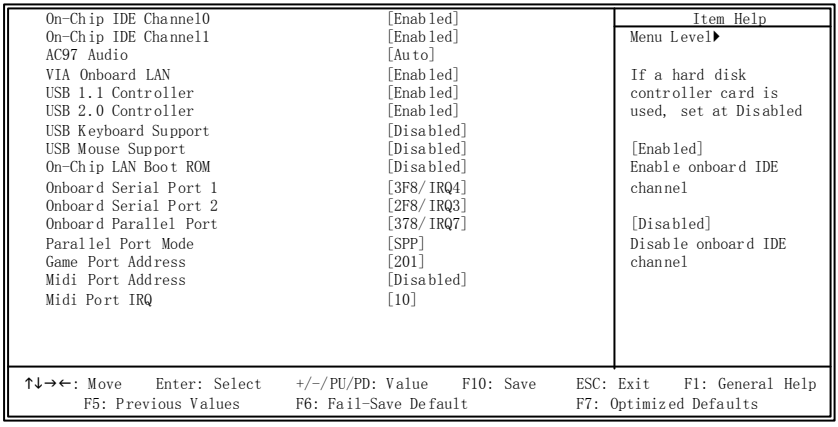
CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
Integrated Peripherals
On-Chip IDE Channel0 [Enabled]
On-Chip IDE Channel1 [Enabled]
AC97 Audio [Auto]
VIA Onboard LAN [Enabled]
USB 1.1 Controller [Enabled]
USB 2.0 Controller [Enabled]
USB Keyboard Support [Disabled]
USB Mouse Support [Disabled]
On-Chip LAN Boot ROM [Disabled]
Onboard Serial Port 1 [3F8/IRQ4]
Onboard Serial Port 2 [2F8/IRQ3]
Onboard Parallel Port [378/IRQ7]
Parallel Port Mode [SPP]
Game Port Address [201]
Midi Port Address [Disabled]
Midi Port IRQ [10]
Item Help
Menu Level▶
If a hard disk controller card is used, set at Disabled
[Enabled]
Enable onboard IDE channel
[Disabled]
Disable onboard IDE channel
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

On-Chip IDE Channel0

When set at "Enabled", it allows you to use the onboard primary PCI IDE. If a hard disk controller card is used, please set at "Disabled".

- Enabled — Enable onboard 1st channel IDE port. (Default value)
- Disabled — Disable onboard 1st channel IDE port.

On-Chip IDE Channel1

When set at "Enabled", it allows you to use the onboard secondary PCI IDE. If a hard disk controller card is used, please set at "Disabled".

- Enabled — Enable onboard 2nd channel IDE port. (Default value)
- Disabled — Disable onboard 2nd channel IDE port.

AC97 Audio

- Enabled — Enable onboard AC'97 audio function. (Default value)
- Disabled — Disable this function.

VIA Onboard LAN

- Enabled — Enable onboard LAN function. (Default value)
- Disabled — Disable this function.

USB 1.1 Controller

Disable this function if you are not using the onboard USB feature.

- Enabled — Enable USB 1.1 controller. (Default value)
- Disabled — Disable USB 1.1 controller.

USB 2.0 Controller

Disable this function if you are not using the onboard USB feature.

- Enabled — Enable USB 2.0 controller. (Default value)
- Disabled — Disable USB 2.0 controller.

USB Keyboard Support

- Enabled — Enable USB keyboard support.
- Disabled — Disable USB keyboard support. (Default value)

USB Mouse Support
- Enabled — Enable USB mouse support.
- Disabled — Disable USB mouse support. (Default value)

On-Chip LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.
- Disabled — Disable this function. (Default Value)
- Enabled — Enable this function.

Onboard Serial Port 1
- Auto — BIOS will automatically setup the port 1 address.
- 3F8/IRQ4 — Enable onboard Serial port 1 and address is 3F8. (Default value)
- 2F8/IRQ3 — Enable onboard Serial port 1 and address is 2F8.
- 3E8/IRQ4 — Enable onboard Serial port 1 and address is 3E8.
- 2E8/IRQ3 — Enable onboard Serial port 1 and address is 2E8.
- Disabled — Disable onboard Serial port 1.

Onboard Serial Port 2
- Auto — BIOS will automatically setup the port 2 address.
- 3F8/IRQ4 — Enable onboard Serial port 2 and address is 3F8.
- 2F8/IRQ3 — Enable onboard Serial port 2 and address is 2F8. (Default value)
- 3E8/IRQ4 — Enable onboard Serial port 2 and address is 3E8.
- 2E8/IRQ3 — Enable onboard Serial port 2 and address is 2E8.
- Disabled — Disable onboard Serial port 2.

Onboard Parallel port

This feature allows you to select from a given set of parameters if the parallel port uses the onboard I/O controller.
- 378/IRQ7 — Enable onboard LPT port and address is 378/IRQ7. (Default value)
- 278/IRQ5 — Enable onboard LPT port and address is 278/IRQ5.
- Disabled — Disable onboard LPT port.
- 3BC/IRQ7 — Enable onboard LPT port and address is 3BC/IRQ7.

Parallel Port Mode
- SPP — Using Parallel port as Standard Parallel Port. (Default value)
- EPP — Using Parallel port as Enhanced Parallel Port.
- ECP — Using Parallel port as Extended Capabilities Port.
- ECP+EPP — Using Parallel port as ECP & EPP mode.

Game Port Address
- 201 — Set Game Port Address to 201. (Default value)
- 209 — Set Game Port Address to 209.
- Disabled — Disable this function.

Midi Port Address
- 300 — Set Midi Port Address to 300.
- 330 — Set Midi Port Address to 330.
- Disabled — Disable this function.(Default value)

Midi Port IRQ
- 5 — Set Midi Port IRQ to 5.
- 10 — Set Midi Port IRQ to 10. (Default value)

Power Management Setup

```
CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
Power Management Setup

   ACPI Suspend Type                [S1(POS)]      | Item Help
x  USB Device Wake-Up from S3       Disabled       | Menu Level▶
   Power LED in S1 state            [Blinking]     | [S1]
   Soft-Off by PWRBTN               [Instant-Off]  | Set suspend type to
   AC Back Function                 [Soft-Off]     | Power On Suspend under
   Keyboard Power On                [Disabled]     | ACPI OS
   Mouse Power On                   [Disabled]     |
   PME Event Wake Up                [Enabled]      | [S3]
   ModemRingOn/WakeOnLan            [Enabled]      | Set suspend type to
   Resume by Alarm                  [Disabled]     | Suspend to RAM under
x  Date (of Month) Alarm            Everyday       | ACPI OS
x  Time (hh:mm:ss) Alarm            0 : 0 : 0      |

↑↓→←: Move   Enter: Select   +/-/PU/PD: Value   F10: Save   ESC: Exit   F1: General Help
     F5: Previous Values     F6: Fail-Save Default          F7: Optimized Defaults
```

- **ACPI Suspend Type**
  - S1(POS) — Set ACPI suspend type to S1. (Default value)
  - S3(STR) — Set ACPI suspend type to S3.

- **USB Device Wake-Up From S3**

  This function will available when "ACPI Suspend Type" set at "S3/STR".
  - Disabled — USB device can't wake up system from S3.
  - Enabled — USB device can wake up system from S3. (Default value)

- **Power LED in S1 state**
  - Blinking — In standby mode(S1), power LED will blink. (Default value)
  - Dual/Off — In standby mode(S1):
    a. If you use single color LED, power LED will ture off.
    b. If you use dual color LED, power LED will ture to another color.

- **Soft-off by PWR-BTTN**
  - Instant-off — Press power button then Power off instantly. (Default value)
  - Delay 4 Sec. — Press power button 4 sec to Power off. Enter suspend if button is pressed less than 4 sec.

- **AC Back Function**
  - Soft-Off — Always in Off state when AC back to the system. (Default value)
  - Full-On — Always power on the system when AC back.
  - Memory — System power on depends on the status before AC lost.

- **Keyboard Power On**
  - Disabled — Disable this function. (Default value)
  - Password — Enter from 1 to 5 characters to set the keyboard power on password.
  - Keyboard 98 — If your keyboard has a "POWER Key" button, you can press the key to power on your system.

- **Mouse Power On**
  - Disabled — Disabled this function. (Default value)
  - Enabled — Power on system by mouse event.

PME Event Wake Up

When set at Enabled, any PCI-PM event can awake the system from a PCI-PM controlled stated. This feature requires an ATX power supply that provides at least 1A on the +5VSB lead.

- Disabled — Disable this function.
- Enabled — Enable PME as wake up event. (Default value)

ModemRingOn/WakeOnLan

An incoming call via modem or an input signal comes from the other client server on the LAN can awake the system from any suspend state.

- Disabled — Disable Modem Ring on function.
- Enabled — Enable Modem Ring on function. (Default value)

Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

- Disabled — Disable this function. (Default Value)
- Enabled — Enable alarm function to POWER ON system.

  If RTC Alarm Lead To Power On is Enabled.
  Date (of Month) Alarm : Everyday, 1~31
  Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

KB Power ON Password

- Enter — Input password (from 1 to 5 characters) and press Enter to set the keyboard power on password.

PnP/PCI Configurations

```
CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
PnP/PCI Configurations

PCI 1 IRQ Assignment          [Auto]      | Item Help
PCI 2 IRQ Assignment          [Auto]      | Menu Level▶
PCI 3 IRQ Assignment          [Auto]      |
                                          | Device(s) using this
                                          | INT:
                                          |
                                          | Display Cntrlr
                                          | -Bus 1 Dev 0 Func 0

↑↓→←: Move  Enter: Select  +/-/PU/PD: Value  F10: Save  ESC: Exit  F1: General Help
     F5: Previous Values   F6: Fail-Save Default        F7: Optimized Defaults
```

PCI 1 IRQ Assignment

- Auto — Auto assign IRQ to PCI 1. (Default value)
- 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

PCI 2 IRQ Assignment

- Auto — Auto assign IRQ to PCI 2. (Default value)
- 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

PCI 3 IRQ Assignment

- Auto — Auto assign IRQ to PCI 3. (Default value)
- 3,4,5,7,9,10,11,12,14,15 — Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

PC Health Status

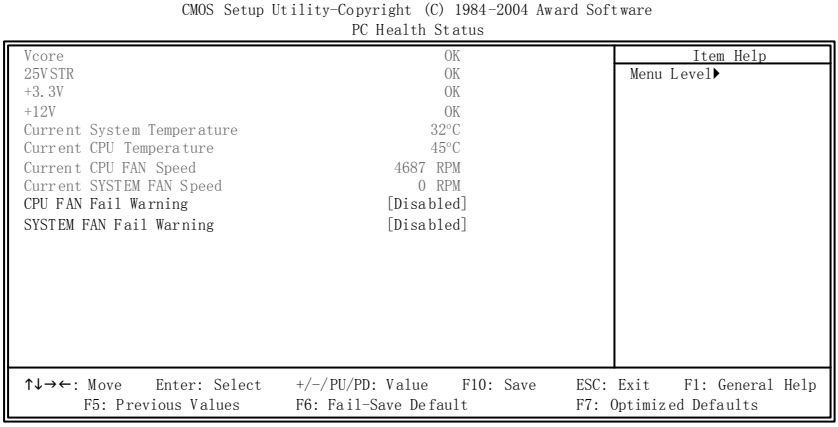
CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
PC Health Status
Vcore OK
25VSTR OK
+3.3V OK
+12V OK
Current System Temperature 32°C
Current CPU Temperature 45°C
Current CPU FAN Speed 4687 RPM
Current SYSTEM FAN Speed 0 RPM
CPU FAN Fail Warning [Disabled]
SYSTEM FAN Fail Warning [Disabled]
Item Help
Menu Level▶
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

- **Current Voltage (V) Vcore / 25VSTR / +3.3V / +12V**
  - Detect system's voltage status automatically.
- **Current System/CPU Temperature**
  - Detect system/CPU temperature automatically.
- **Current CPU/SYSTEM FAN Speed (RPM)**
  - Detect CPU/system Fan speed status automatically.
- **CPU FAN Fail Warning**
  - Disabled Fan warning function disable. (Default value)
  - Enabled Fan warning function enable.
- **SYSTEM FAN Fail Warning**
  - Disabled Fan warning function disable. (Default value)
  - Enabled Fan warning function enable.

Frequency/Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2004 Award Software
Frequency/Voltage Control

	Auto Detect PCI/DIMM Clk	[Enabled]	Item Help
	Spread Specturm	[Enabled]	Menu Level▶
	CPU Host Clock Control	[Disabled]	
x	CPU Clock	133MHz	
	DRAM Clock(MHz)	[By SPD]	
	AGP OverVoltage Control	[Auto]	
	DIMM OverVoltage Control	[Auto]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

Incorrect using these features may cause your system broken. For power End-User use only!

Auto Detect PCI/DIMM Clk

- Disabled — Disable this function.
- Enabled — Auto detect PCI/DIMM clock. (Default value)

Spread Spectrum

- Disabled — Disable this function.
- Enabled — Enable clock spread spectrum. (Default value)

CPU Host Clock Control

Note: If system hangs up before enter CMOS setup utility, wait for 20 sec for times out reboot. When time out occur, system will reset and run at CPU default Host clock at next boot.

- Disabled — Disable CPU Host Clock Control. (Default value)
- Enabled — Enable CPU Host Clock Control.

CPU Clock

- 100 — Set CPU Host Clock to 100MHz~132MHz.
- 133 — Set CPU Host Clock to 133MHz~165MHz.
- 166 — Set CPU Host Clock to 166MHz~199MHz.

DRAM Clock (MHz)

Wrong frequency may make system can't boot, clear CMOS to overcome wrong frequency issue.

- By SPD — Set memory frequency by DRAM SPD data. (Default value)
- 133-DDR266 — If you use DDR266 DRAM module, please set at "133-DDR266".
- 166-DDR333 — If you use DDR333 DRAM module, please set at "166-DDR333".

AGP OverVoltage Control

Increase AGP voltage may get stable for over-clock. But it may damage to AGP card when enable this feature.

- Auto — Supply voltage as AGP required. (Default value)
- +0.1V — Increase AGP voltage +0.1V.

- +0.2V Increase AGP voltage +0.2V.
- +0.3V Increase AGP voltage +0.3V.

DIMM OverVoltage Control

Increase DIMM voltage may get stable for over-clock. But it may damage to memory module when enable this feature.

- Auto Supply voltage as DIMM required. (Default value)
- +0.1V Increase DIMM voltage +0.1V.
- +0.2V Increase DIMM voltage +0.2V.
- +0.3V Increase DIMM voltage +0.3V.

Load Fail-Safe Defaults

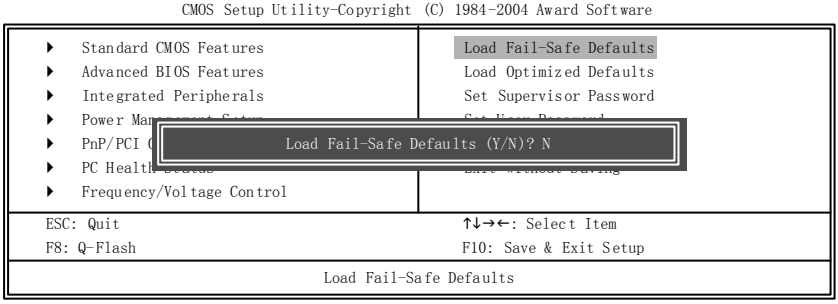

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

Load Optimized Defaults

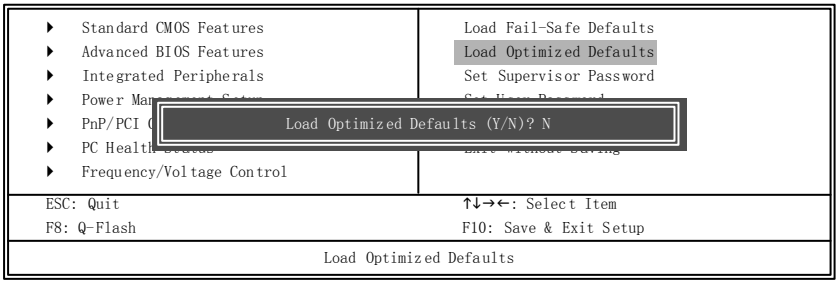

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

Set Supervisor/User Password

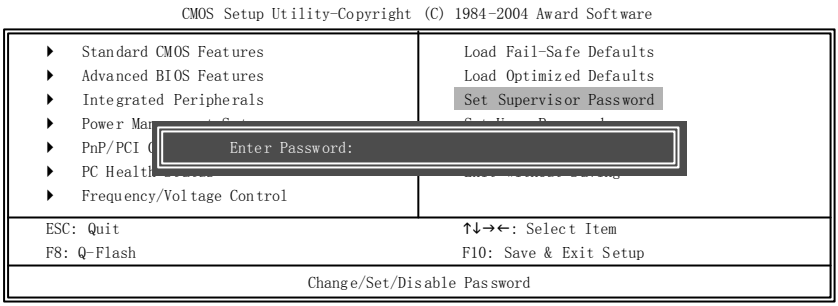

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:
SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

Save & Exit Setup

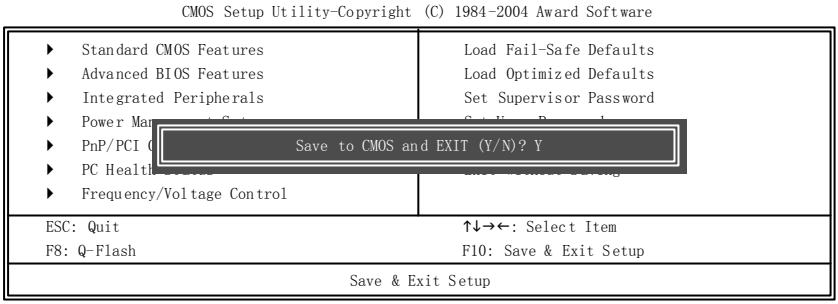

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.
Type "N" will return to Setup Utility.

Exit Without Saving

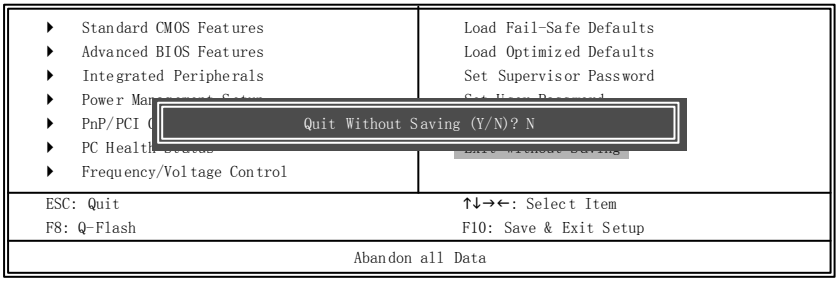

Type "Y" will quit the Setup Utility without saving to RTC CMOS.
Type "N" will return to Setup Utility.

Chapter 3 Install Drivers

Install Drivers

NOTE

Pictures below are shown in Windows XP

Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

Install Chipset Drivers

This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the Xpress Install to install the drivers automatically.

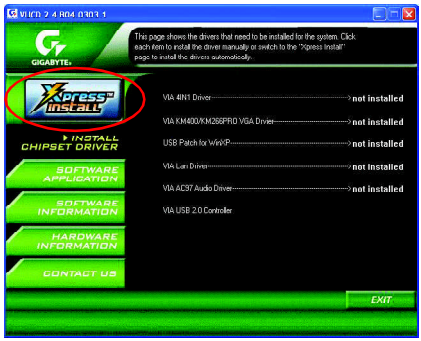
VLCD 2.4.R04.0303.1
GIGABYTE
This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the "Xpress Install" page to install the drivers automatically.
Xpress Install
VIA 4IN1 Driver ..... not installed
VIA KM400/KM266PRO VGA Driver ..... not installed
USB Patch for WinXP ..... not installed
VIA Lan Driver ..... not installed
VIA AC97 Audio Driver ..... not installed
VIA USB 2.0 Controller
INSTALL CHIPSET DRIVER
SOFTWARE APPLICATION
SOFTWARE INFORMATION
HARDWARE INFORMATION
CONTACT US
EXIT

The "Xpress Install" uses the"Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The Xpress Install will finish the installation for you automatically.

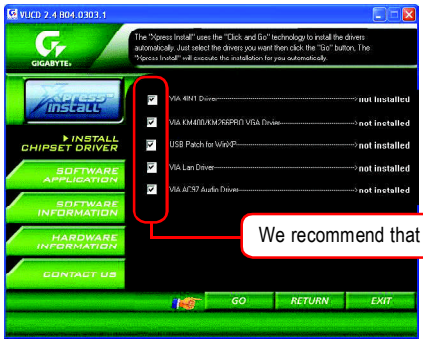
VLCD 2.4.R04.0303.1
GIGABYTE
The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "Go" button. The "Xpress Install" will execute the installation for you automatically.
Xpress Install
VIA 4IN1 Driver ..... not installed
VIA KM400/KM266PRO VGA Driver ..... not installed
USB Patch for WinXP ..... not installed
VIA Lan Driver ..... not installed
VIA AC97 Audio Driver ..... not installed
INSTALL CHIPSET DRIVER
SOFTWARE APPLICATION
SOFTWARE INFORMATION
HARDWARE INFORMATION
CONTACT US
GO
RETURN
EXIT
We recommend that you install all components in the list.

NOTE

Massage: Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

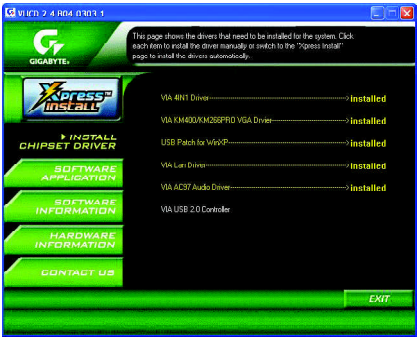
This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the "Xpress Install" page to install the drivers automatically.
Xpress install
INSTALL CHIPSET DRIVER
SOFTWARE APPLICATION
SOFTWARE INFORMATION
HARDWARE INFORMATION
CONTACT US
VIA 4IN1 Driver ---------- Installed
VIA KM400/KM266PRO VGA Drvier ---------- Installed
USB Patch for WinXP ---------- Installed
VIA Lan Driver ---------- Installed
VIA AC97 Audio Driver ---------- Installed
VIA USB 2.0 Controller
EXIT

NOTE Driver install finished !
You have to reboot system !

Item Description

- VIA 4IN1 Driver
  For INF, AGP, IDE and DMA driver.
- VIA KM400 / KM266PRO VGA Driver
  For KM400 / KM266PRO drvier.
- USB Patch for WinXP
  This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- VIA Lan Driver
  For VIA Phy family Lan driver.
- VIA AC97 Audio Driver
  Audio driver for VIA codec chipset.
- VIA USB 2.0 Controller
  For VIA VT8233 (VT6203) / VIA VT8235 south bridge.

For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

CONTACT US

Contact us via the information in this page all over the world.

- **Taiwan**

Gigabyte Technology Co., Ltd.
Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien, Taiwan, R.O.C.
Tel: 886 (2) 8912-4888
Fax: 886 (2) 8912-4003
Tech. Support:
http://tw.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://www.gigabyte.com.tw

- **USA**

G.B.T. INC.
Address: 17358 Railroad St, City of Industry, CA 91748.
Tel: 1 (626) 854-9338
Fax: 1 (626) 854-9339
Tech. Support:
http://www.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://www.giga-byte.com

- **Germany**

G.B.T. Technology Trading GmbH
Tel: 49-40-2533040
49-01803-428468 (Tech.)
Fax: 49-40-25492343 (Sales)
49-01803-428329 (Tech.)
Tech. Support:
http://de.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://www.gigabyte.de

- **Japan**

Nippon Giga-Byte Corporation
Website: http://www.gigabyte.co.jp

- **U.K**

G.B.T. TECH. CO. LTD.
Tel: 44-1908-362700
Fax: 44-1908-362709
Tech. Support:
http://uk.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://uk.giga-byte.com

- **The Netherlands**

Giga-Byte Technology B.V.
Address: Verdunplein 8 5627 SZ, Eindhoven, The Netherlands
Tel: +31 40 290 2088
NL Tech.Support : 0900-GIGABYTE (0900-44422983, 0.2/M)
BE Tech.Support : 0900-84034 (0.4/M)
Fax: +31 40 290 2089
Tech. Support:
http://nz.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://www.giga-byte.nl

- **China**

NINGBO G.B.T. Tech. Trading CO., Ltd.
Tech. Support:
http://cn.giga-byte.com/TechSupport/ServiceCenter.htm
Non-Tech. Support (Sales/Marketing issues):
http://ggts.gigabyte.com.tw/nontech.asp
Website: http://www.gigabyte.com.cn
Beijing
Tel: 86-10-82856054, 86-10-82856064, 86-10-82856094
Fax: 86-10-82856575
Chengdu
Tel: 86-28-85236930
Fax: 86-28-85256822
GuangZhou
Tel: 86-20-87586273
Fax: 86-20-87544306
Shanghai
Tel: 86-21-64737410
Fax: 86-21-64453227
Shenyang
Tel: 86-24-23960918, 86-24-23960893
Wuhan
Tel: 86-27-87854385, 86-27-87854802
Fax: 86-27-87854031
Xian
Tel: 86-29-5531943
Fax: 86-29-5539821